



LIST OF MATERIALS



To cover pipes with Qboard®:

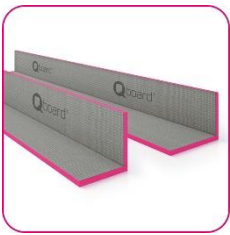


Qboard® corner

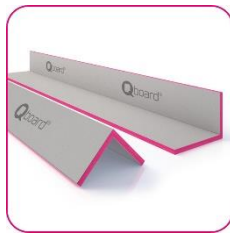

Qboard® corner
reno



Glass fibre tape

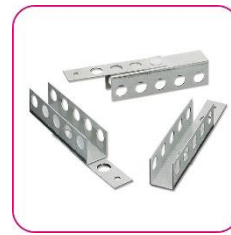

Anchor



or BOARD-FIX

Tools

- Cordless screwdriver
- Pencil
- Drill
- Hand saw
- Bucket
- Finishing trowel
- Paddle mixer
- Straight edge
- Spirit level
- Tape measure

Further material

- Flexible tile adhesive
- Screws and plugs (when using Qboard anchor brackets)
- Finishing materials (tiles, plaster, render, grout, silicone sealant)

This serves as a guideline. Exact quantities and dimensions depend on your individual planning.

